

## INSTRUCTIONS FOR BATTERY-OPERATED PUMP

### READ INSTRUCTIONS AND WARNINGS BEFORE USE:


1. The high-volume pump is designed for inflating items such as airbeds, inflatable boats, and inflatable toys. It is not intended for inflating tires or for continuous operation.
2. Do not operate under moist conditions. Store indoors.
3. Children should not play with the pump. This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the safe use of the appliance and understand the hazards involved.
4. Cleaning and user maintenance shall be performed by adults only.
5. The pump must be powered only by a Safety Extra-Low Voltage (SELV) supply.

### WARNING:

- i. Never attempt to disassemble or block the openings while pump is operating.
- ii. Never let other articles such as sand, small rocks, etc. get sucked into the inflating or deflation openings while pump is operating.
- iii. The electric pump is not a toy. It is not intended to be played with by children.
- iv. Non-rechargeable batteries are not to be recharged.
- v. Different types of batteries or new and used batteries are not to be mixed.
- vi. Batteries are to be inserted with the correct polarity.
- vii. Exhausted batteries are to be removed from the appliance and safely disposed of.
- viii. If the appliance is to be stored unused for a long period, ensure the batteries are removed.
- ix. The supply terminals are not to be short-circuited.

### Product Features:

- Reversible for inflation and deflation
- Operates on 4x D 1.5V batteries
- Handheld and portable design
- With 3 different nozzle adapters
- Hi-Volume air flow for quick inflation

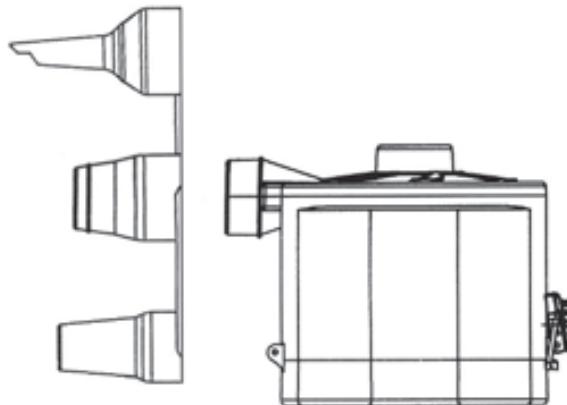

### OPERATION:

#### A. Inflating:

1. To begin inflating, open external stopper of valve and pull it to extend out.
2. Select the appropriate nozzle and attach it to the inflation end of the pump.
3. Insert nozzle tip into the valve. Turn on the pump by pressing the switch to the "-" position. Turn off the pump by pushing the switch to the "0" position.

4. When fully inflated, press the valve inward with the pump nozzle to secure the seal.  
Gently twist and pull the pump out.
5. Remove pump and close external stopper.

#### **B. Deflating:**

Remove adapter nozzle from inflation end. Attach the nozzle to the deflation end of pump.  
Repeat same steps as inflation.

#### **REPLACEMENT OF BATTERIES IN BATTERY PUMP**

1. Open the cover of battery compartment.
2. Remove old batteries. Insert four new D 1.5V batteries according to the correct polarity.
3. Reinstall the cover of battery compartment.

#### **Notice:**

Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.

Non-rechargeable batteries are not to be recharged.

Rechargeable batteries are only to be charged under adult supervision.

Rechargeable batteries are to be removed from the toy before being charged.

Different types of batteries or new and used batteries are not to be mixed.

Batteries are to be inserted with the correct polarity.

Exhausted batteries are to be removed from the toy.

The supply terminals are not to be short-circuited.

#### **ADDITIONAL INFORMATION:**

Before cleaning, remove the batteries. Wipe the appliance gently with a dry cloth.

#### **CAUTION:**

**DON'T USE THE PUMP CONSISTENTLY FOR OVER 5 MINUTES. TURN PUMP OFF FOR 30 MINUTES BEFORE YOU USE IT AGAIN.**

View or download the instruction manual:

[https://www.rmsint.com/pump\\_instruction\\_manual.html](https://www.rmsint.com/pump_instruction_manual.html)

